


Titel/Title Reset Read Out Protection for STG-8xx Devices			Dokumentennr./Document No. 1708170101 Reset Rea- dout Protection		Seite/Page 1 / 2	
Projekt/Project none	Version 0.1	Rev. 1	Ersteller/Writer R. Kleemann	Kontrolle/Control	Datum/Date ..17	

## Reset the Read Out Protection for STG-8xx Devices

### 1 What you need


- Programming device (ST-Link)  
<https://www.barth-elektronik.com/de/programmiergeraet-st-link-v2-isol.html>
- Connecting Cable (VK-35)  
<https://www.barth-elektronik.com/de/verbindungskabel-vk-35.html>
- STM32 ST-LINK utility  
[http://www.st.com/content/st\\_com/en/products/embedded-software/development-tool-software/stsw-link004.html](http://www.st.com/content/st_com/en/products/embedded-software/development-tool-software/stsw-link004.html)

### 2 Preparing

- Install „STM32 ST-LINK utility“
- Connect ST-LinkV2 with STG-8xx and your PC
- Power up the STG-8xx

### 3 Reset Readout Protection

1. Start „STM32 ST-LINK utility“
2. Open Option Bytes through „CTRL+B“

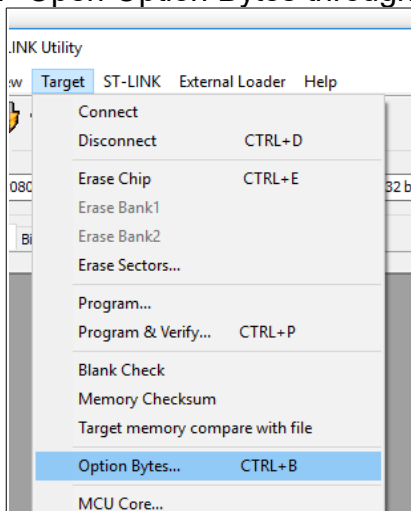

3. Select „Level 0“ under Read Out Protection

